




LivingstonMtnSpas.com

Chill Pill Quick Start Guide for App Use

1. Download the “Smart Life” App
2. Sign up or Log in



**Smart Life -
Smart Living**
Smart Living

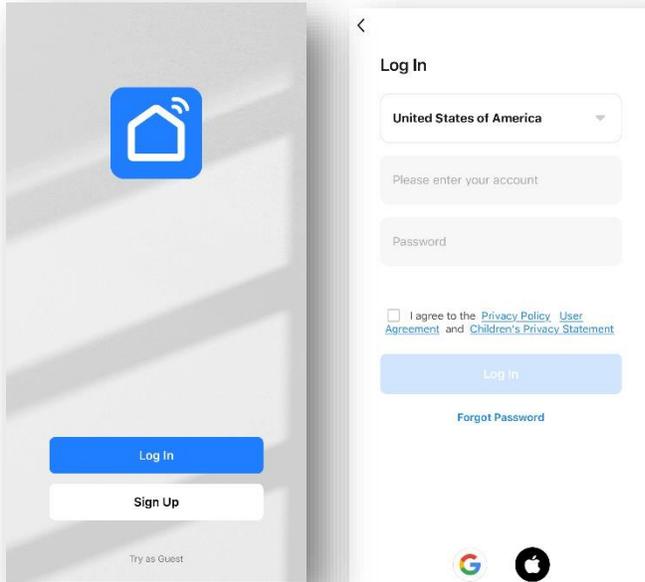

3. Connect your phone/device to the WiFi you would like to connect the Chill Pill to and turn on Bluetooth connections
4. Plug your Chill Pill in and allow for the system to turn on.
 - a. Once on, hold down the “Function” and “Up Key” to turn on the Wifi connect



i. Look for this to start blinking



Icon	Name	Light on representative
	Auto	Automatic temperature regulation
	Refrigeration	Cooling in progress
	Heating	Heating in progress
	Defrost	Defrosting
	Fault	out of order
	Wireless connection	Connected to the Internet

Icon	Name	Description
	Run key	Press once to stop or turn on the machine
	Down key	Used to adjust parameters downward
	Up key	Used to adjust parameters upward
	Timing key	For time setting
	Function key	Mode switch, tap the “Function” key to switch the heating - auto - cooling mode.

5. Open the Smart Life App and “Add Device”

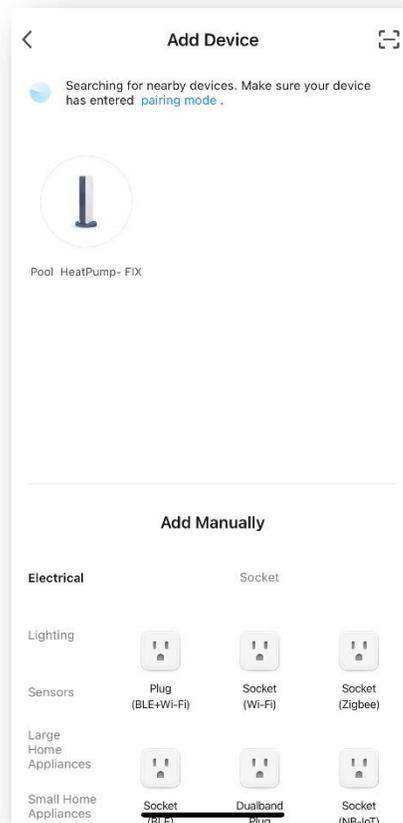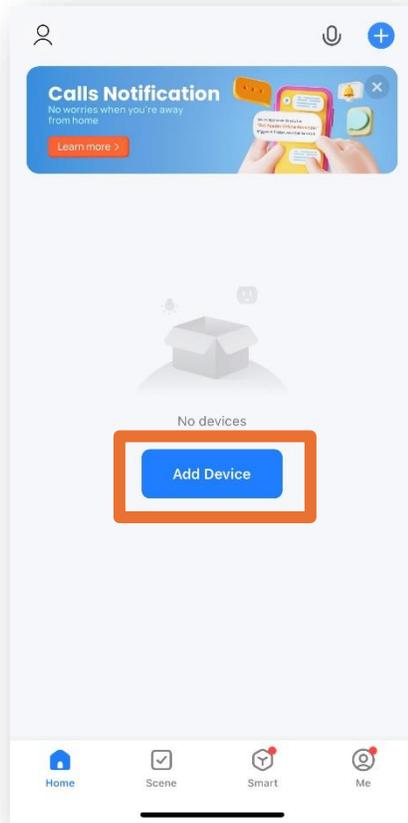



6. Once “add device” is selected the Smart Life App will automatically search for nearby devices. Click on the “Heatpump – Fix” Once installed you will see a note below that reads:

“Added Successfully” and a green check mark will appear.


- a. If the app does not find the device try these steps:
 - i. Ensure the Wifi is blinking from step 4. If not power cycle the unit by unplugging it from the wall for 15 seconds for the set up to clear and start over
 - ii. Manually add the device using the drop down below:

Large Home Appliances

Smart Heat Pump (BLE+Wi-Fi)

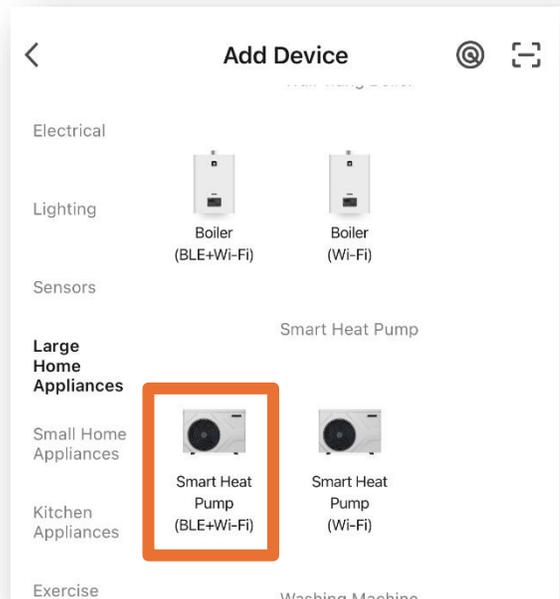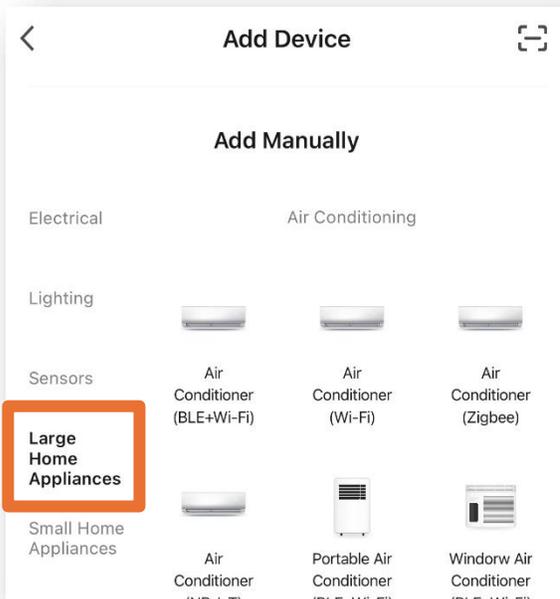


7. Set your user preferences to Fahrenheit

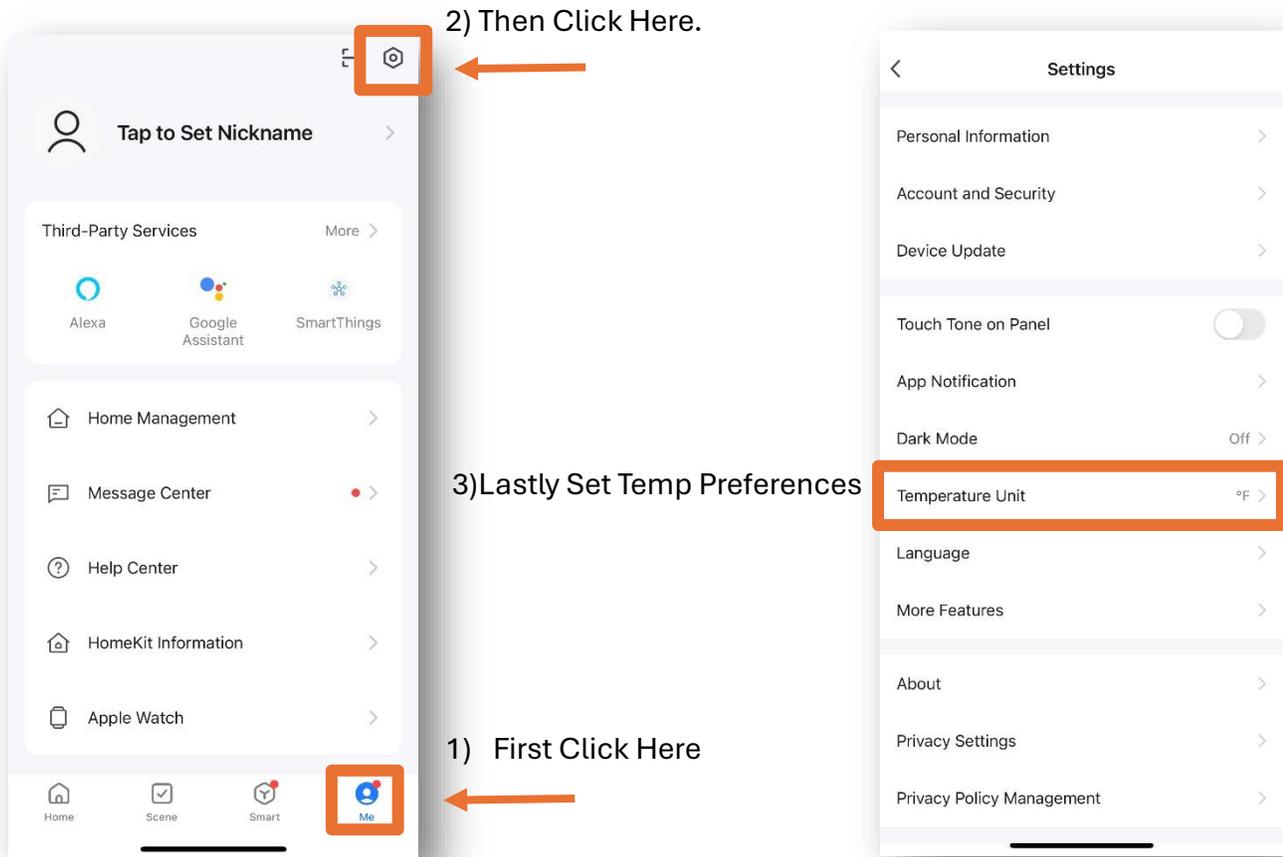


8. Click to “Home” and into your “Pool HeatPump – FIX”

9. Then Click into the set up icon on the upper right corner

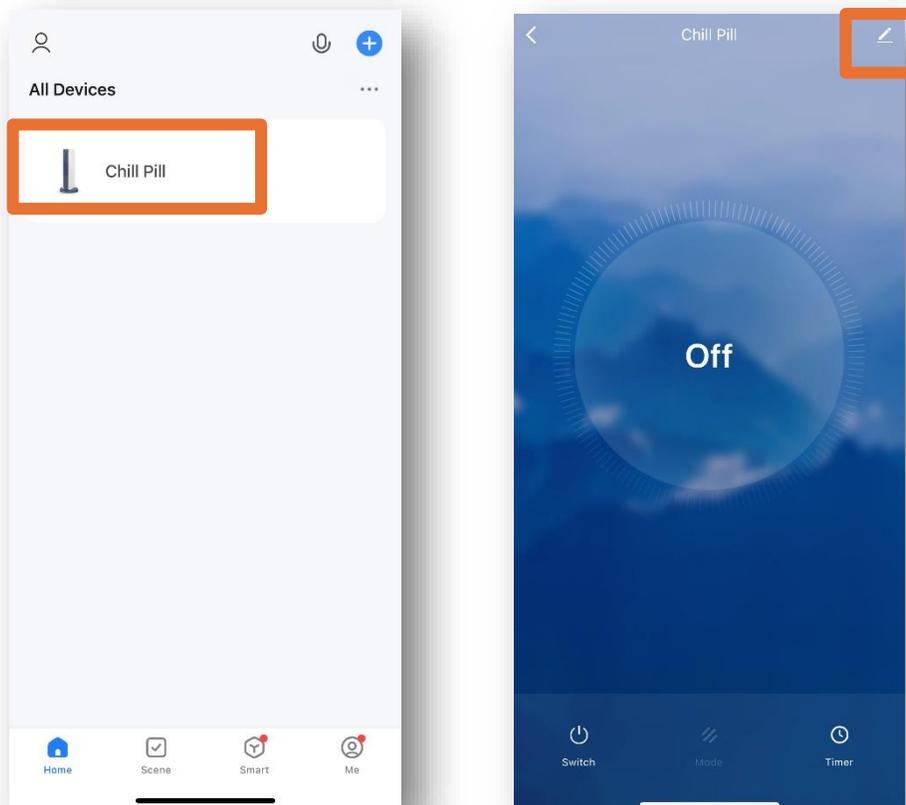


10. Click to update the name to your own “Your Name Chill Pill” or simply call it what is it “Chill Pill”

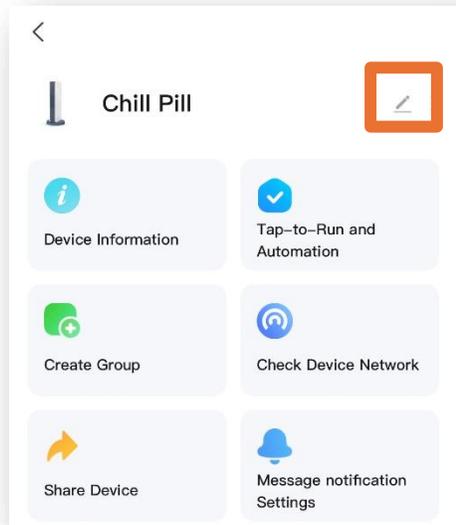

You can share the device here

11. Your Chill Pill is now set for App control
 - a. Switch is your power on power off
 - b. Mode is your
 - i. Cool
 - ii. Heat
 - iii. Auto
 - c. Setting/Timer allows you to change from °F to °C or adjust the timer

DO NOT SET THE TIMER FROM
HERE.


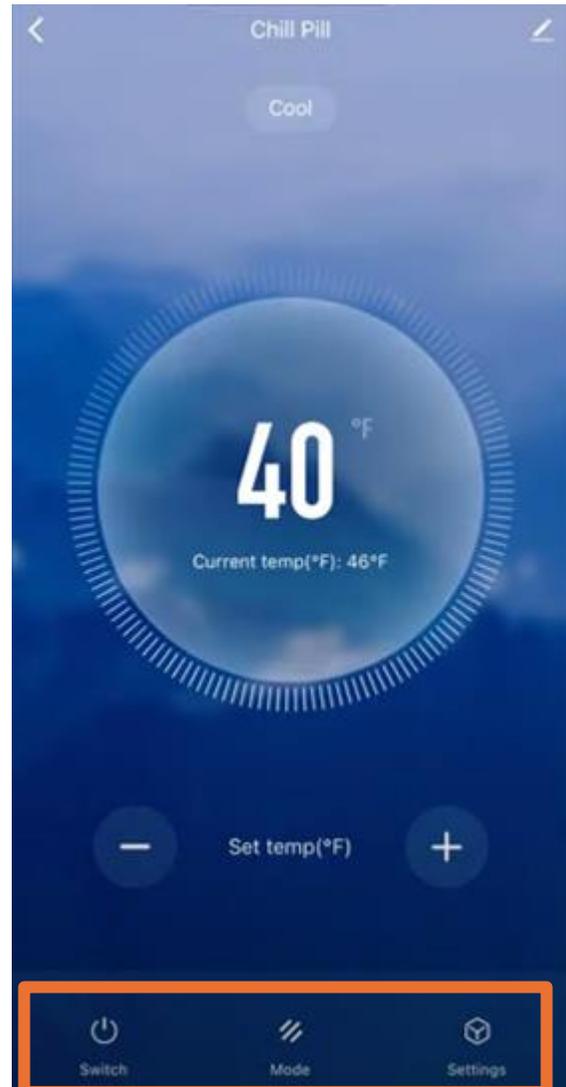


Next lets set your Chill Pills Schedule

12. Setting up your “Scenes” we will start with your “Chill Pill ON” Scene

Click “Create Scene”

Then Click “Schedule”

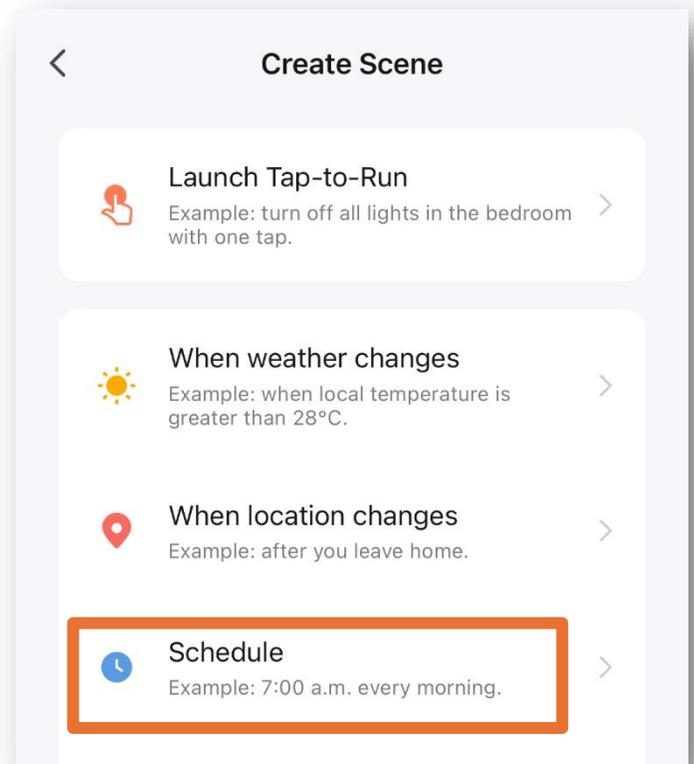
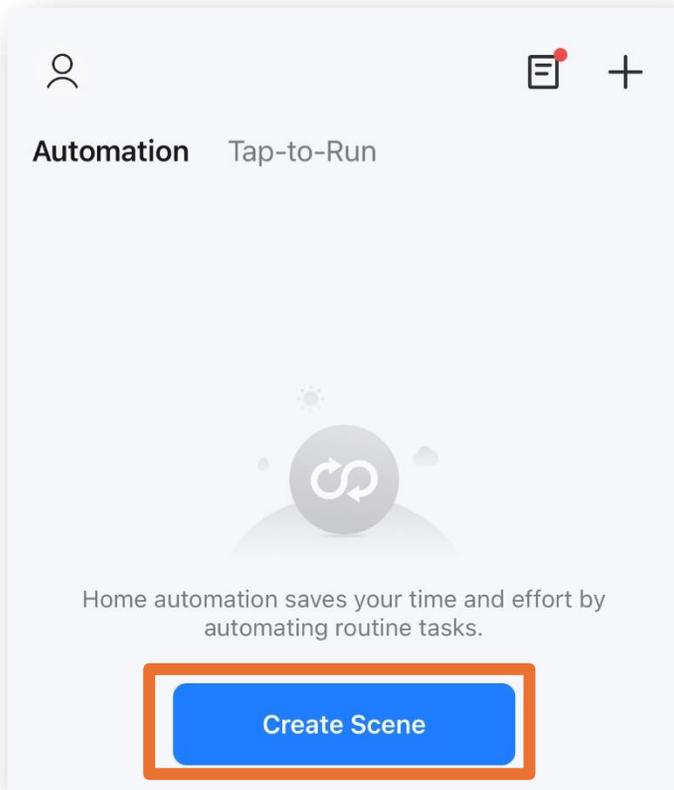


Choose your start time


(based on how long it take to chill)

Click Repeat after you set your start time


Set it for all the days you plan cold plunge

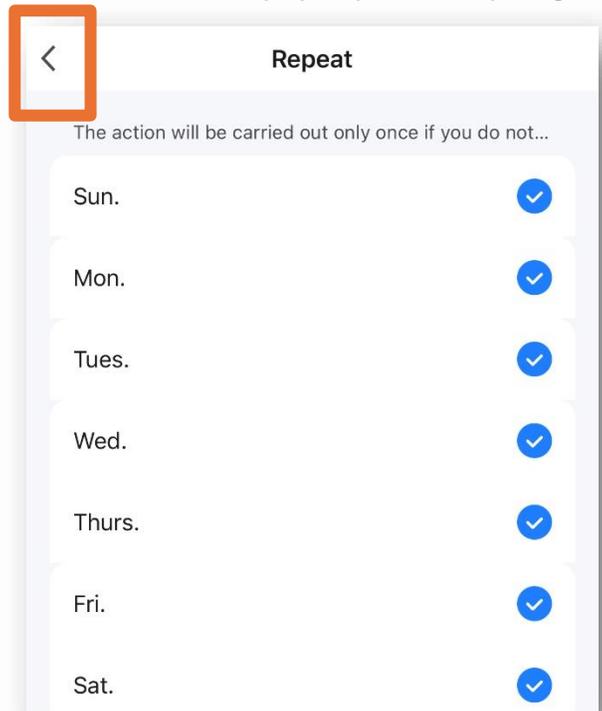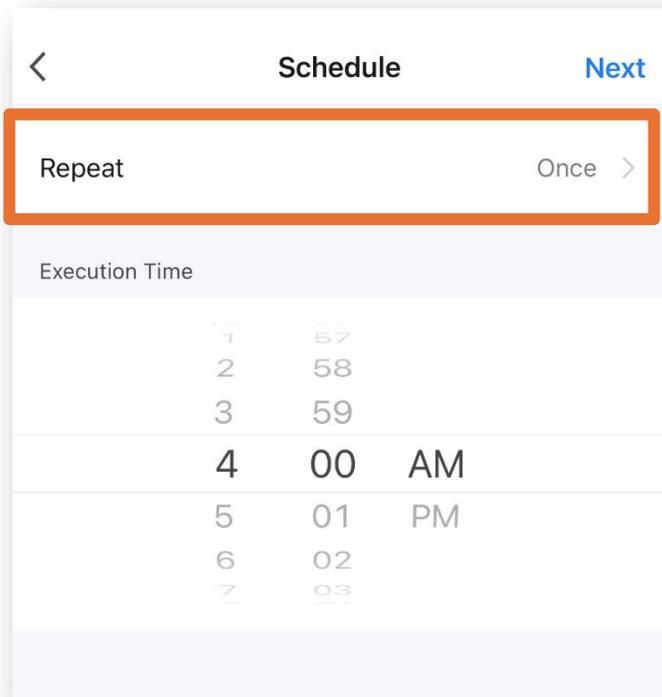


Click the “+” next to “Then”

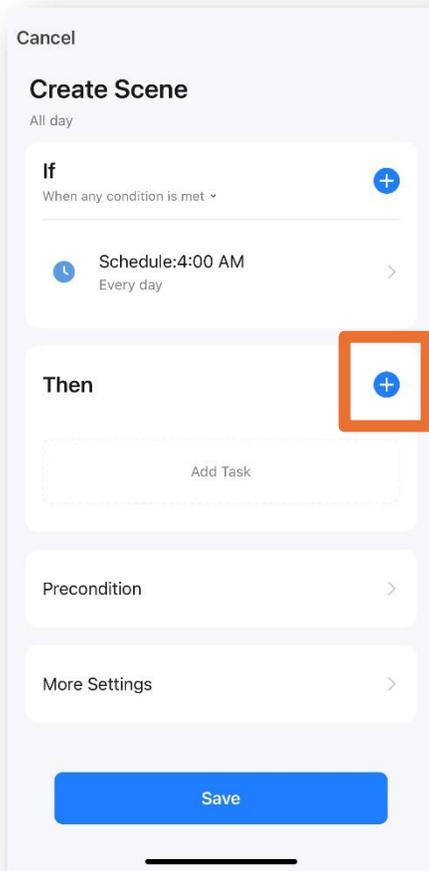

Click “Control Single Device”

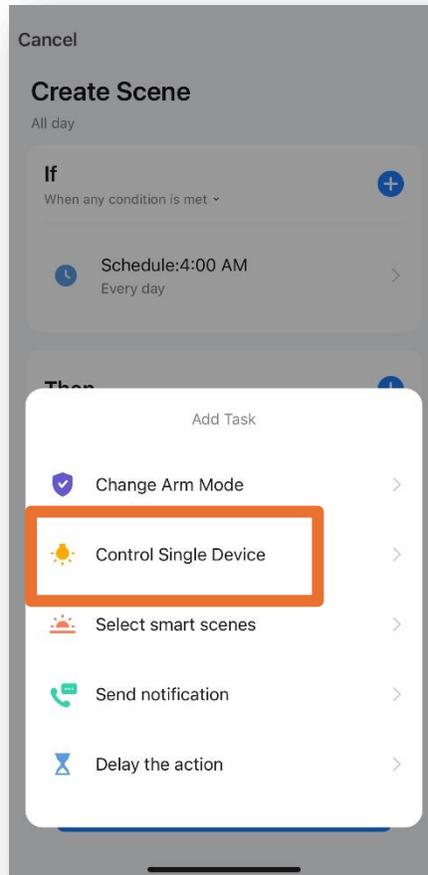


Click “Chill Pill”

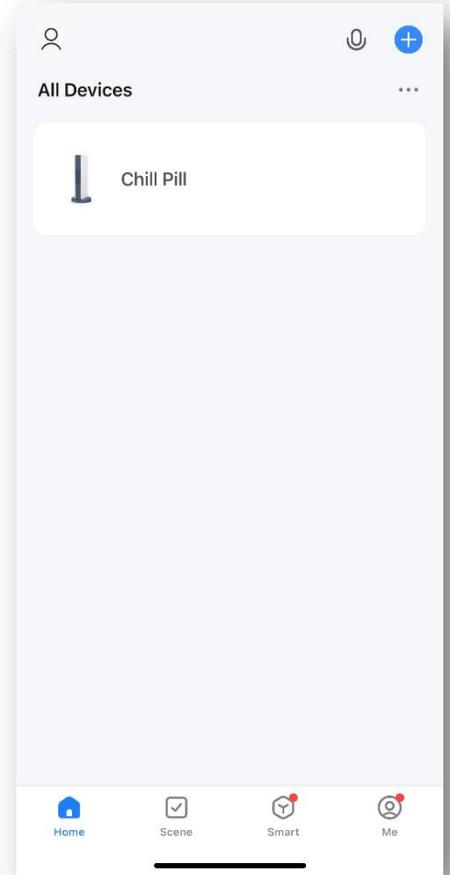


In each selection hit “Save” at the bottom


When you set all 3 selections click “Next”

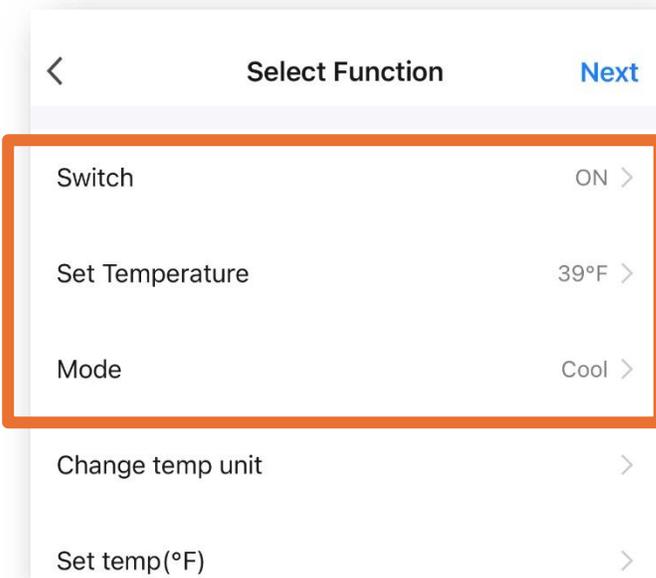

Hit “Save” once everything is in place

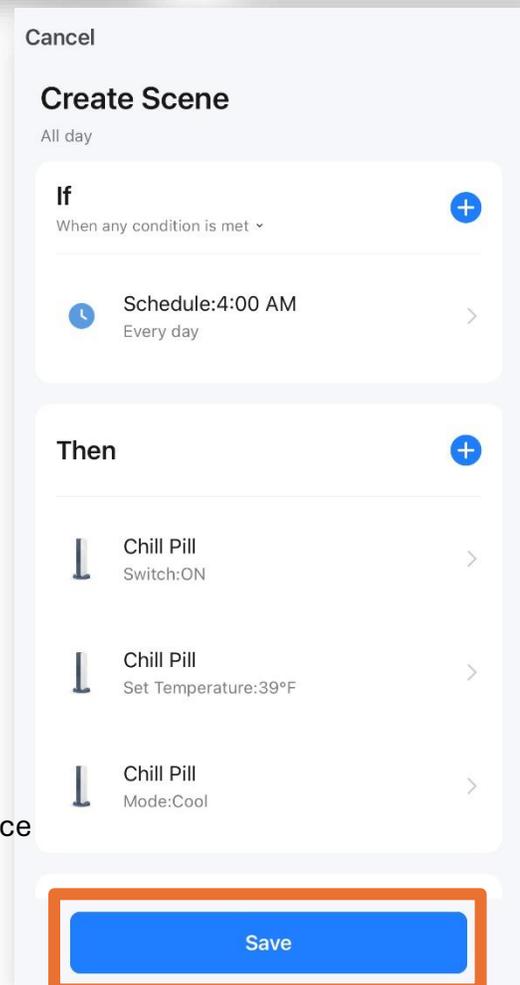


Name and Confirm the the Scene

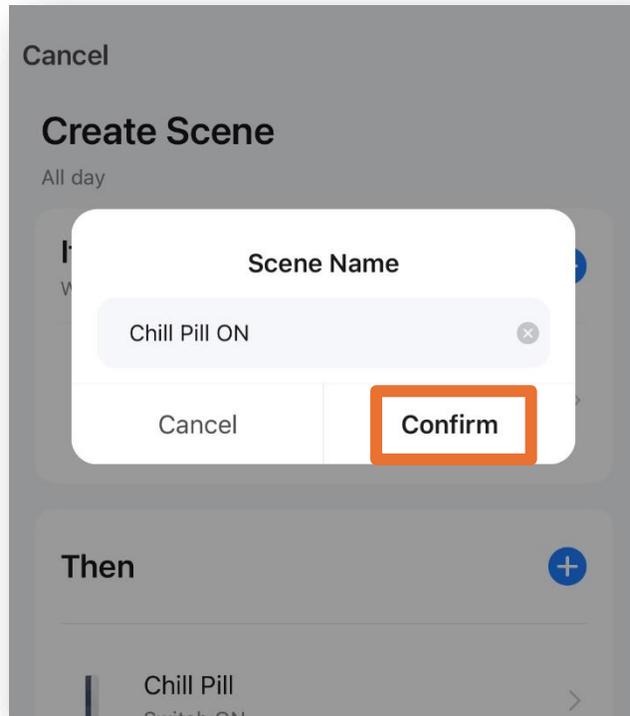


13. Set up your “Chill Pill Off” Scene. Very similar to what we just did.

Click “+” Symbol


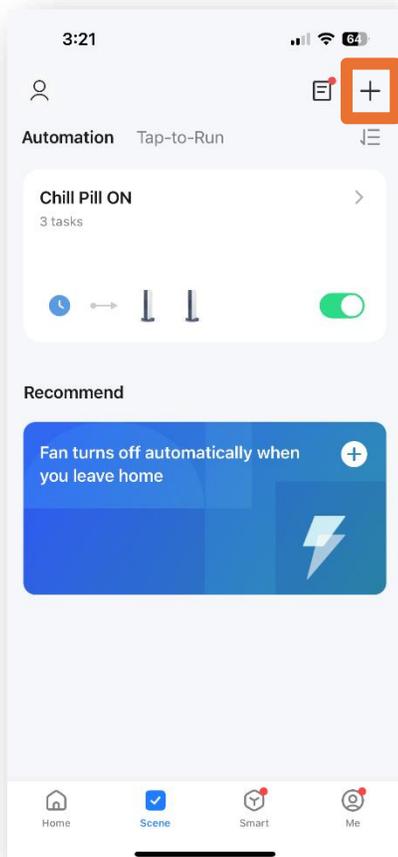


Then Click “Schedule”

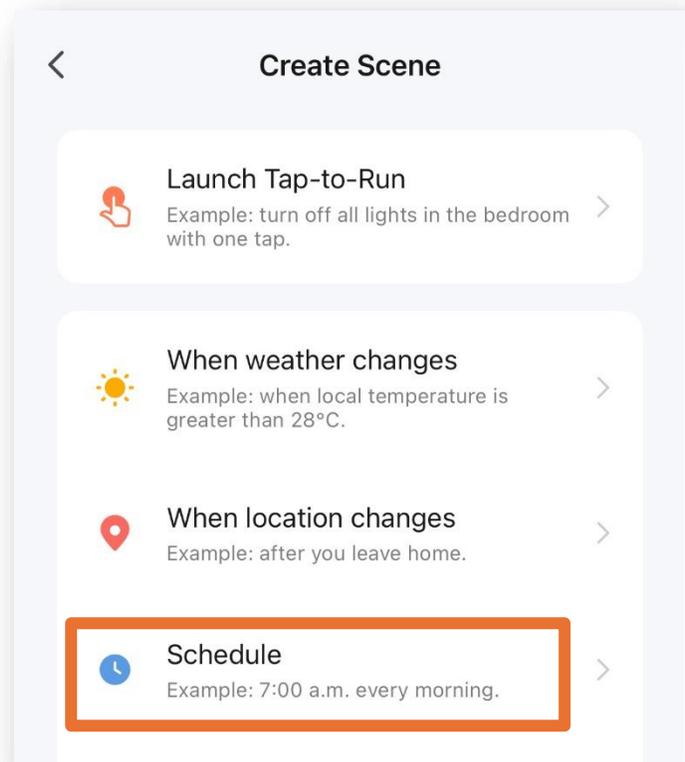

Choose the Chill Pill shut down time
(based on when you want the unit off,
Not necessarily the time you get in)




Click Repeat after you set you stop time

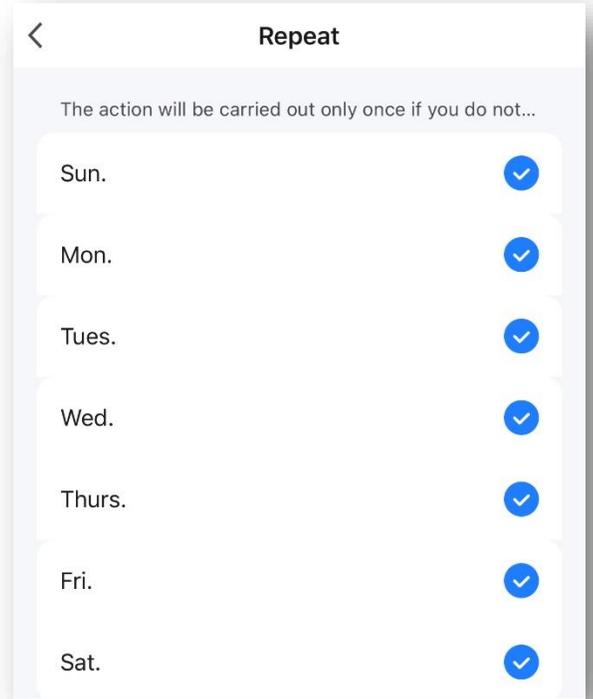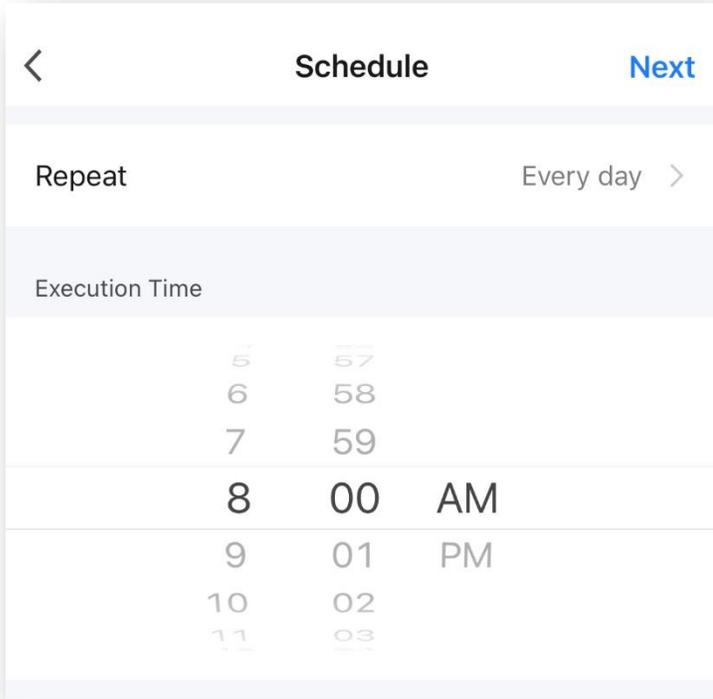





Click the "+" next to "then"

Click "Control Single Device"



Click "Chill Pill"

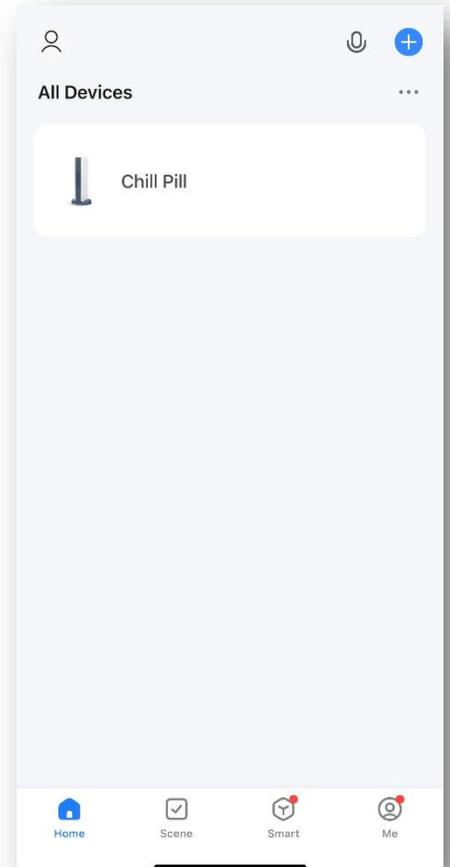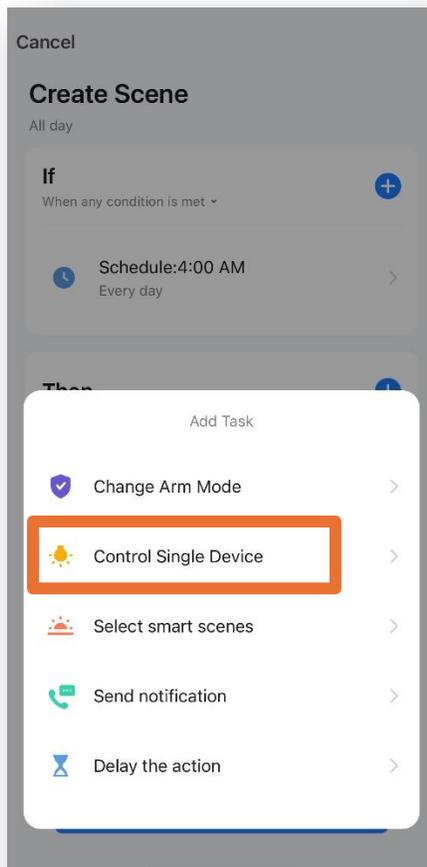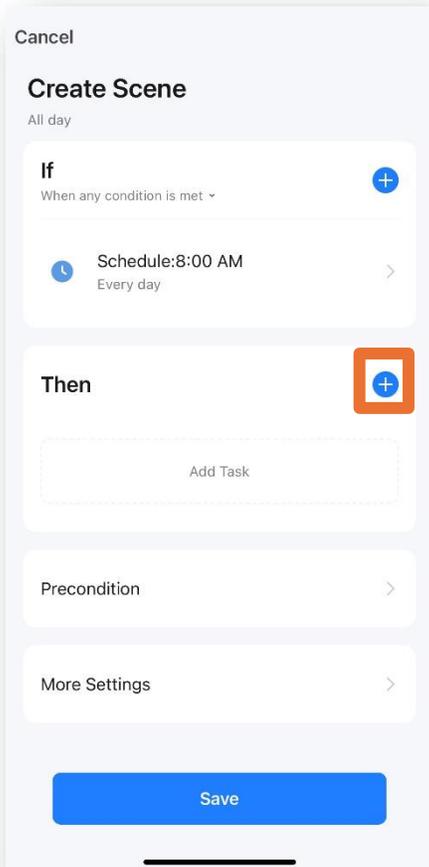

After every selection hit "Save"

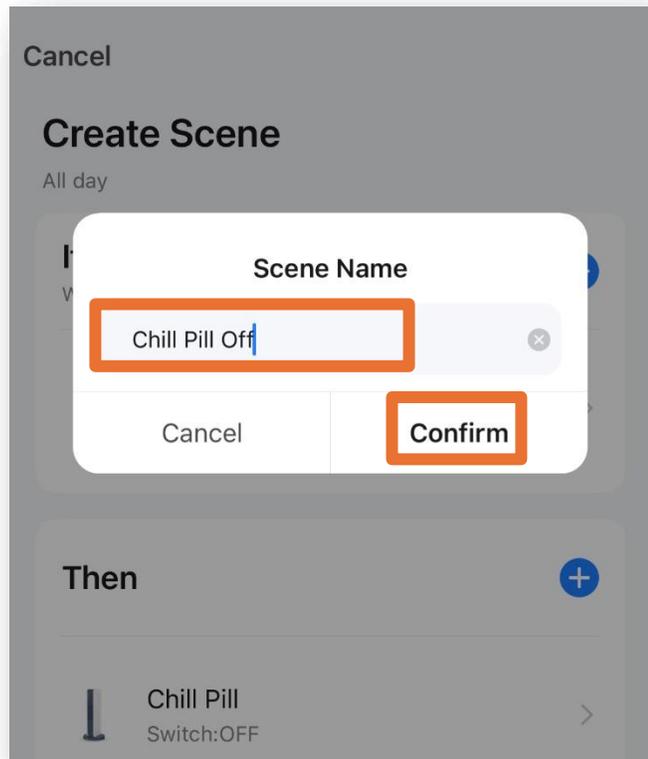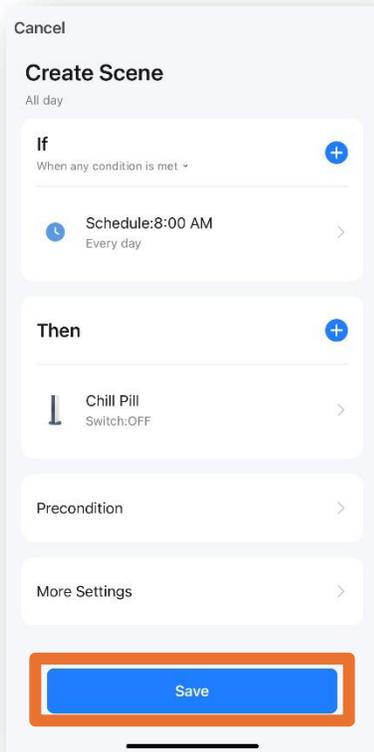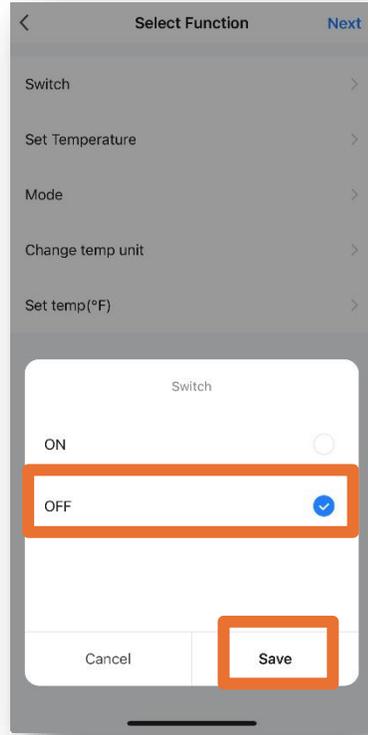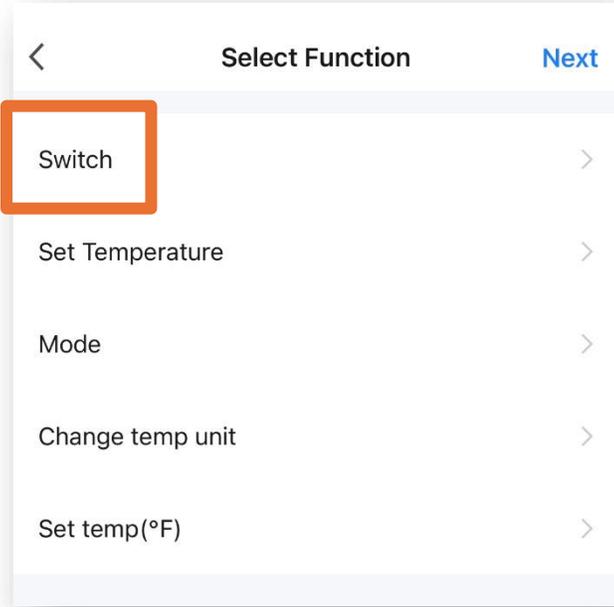

14. Finally let's make sure they are in order if they are not already.

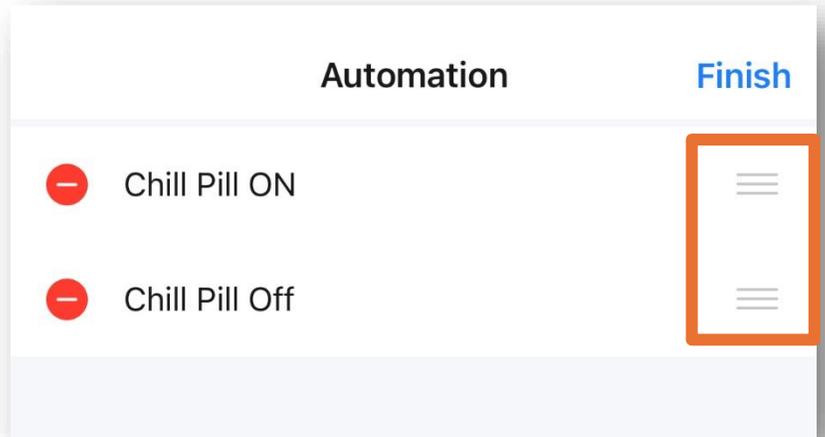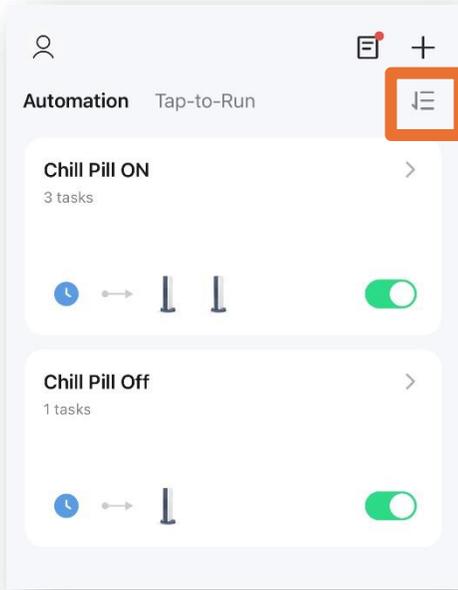

Thank you again for ordering your new Chill Pill from us, we take a lot of pride in our personalized customer service and hope your experience is a part of the reason you will spread the good word.

If you have any issues, concerns or ways we can improve our quick start guide please send them to:

Info@LivingstonMtnSpas.com or try us during daylight hours (PST) at 360.503.0030

Cheers to you and your Chill Pill adventure, we look forward to hearing about your success!



LivingstonMtnSpas.com

LIVE LIFE OUTSIDE